

# Installation @ Equipment Edge

FLEXGROUND Detail

Note: Total thickness of system is based on maximum fall height of equipment

Drawing Not To Scale

